



M1 SERIES

M1 HIRISE | M1 LOW RISE



ASSEMBLY MANUAL | OWNER'S MANUAL | MONITOR MANUAL

**TABLE OF CONTENTS**

---

Owner's Manual	03 – 09
Assembly Instructions	11 – 18
Monitor Instructions	20 – 26
Warranty Information	27

**INTRODUCTION**

---

Congratulations on becoming a WaterRower owner.

Rowing is universally recognized as the perfect aerobic exercise – smooth, low impact, rhythmic and whole-body – unrivalled for its physiological benefits and aesthetic pleasures.

**“Rowing, indoors or outdoors, at any exercise level of intensity, requires a greater exercise expenditure than any other aerobic activity. Calories are burned in relation to the number of muscles used and the intensity and duration of the exercise. Rowing with a sliding seat uses a very large muscle mass since the upper, lower and trunk muscles are used vigorously.”**

**-Dr. C Everett Koop- Former US Surgeon General**

While most rowing machines imitate the action of rowing, they do so mechanically, and therefore lack the natural dynamics experienced when a boat and crew glide down a river.

At WaterRower, we have focused on replicating the physical dynamics of rowing, with the knowledge that this will achieve all of its physiological benefits, as well as much of the aesthetic pleasure.

To maximize the enjoyment from using your WaterRower we recommend that you follow our suggestions on rowing technique and training programs. We hope that some of the discussion points in this manual will improve your knowledge about exercise in general, so that you are better able to fulfill your specific exercise objectives.

Your WaterRower has been carefully hand-crafted to give you years of trouble-free use. You will notice that each WaterRower is unique due to the variance in color and grain that occurs naturally in genuine hardwood. We recommend that you closely follow the assembly details provided, particularly by assembling the machine in the correct sequence, and adhering to the suggested maintenance schedule.

We hope you enjoy using your WaterRower for many years to come!

## SAFETY

---

We recommend consulting a physician before starting out with an exercise program. Please read all instructions before using the WaterRower. Additional information on getting started, rowing technique and rowing training advice can be found at [www.HowToRow.com](http://www.HowToRow.com).

**⚠ Warning:** Please keep hands away from moving parts when rowing machine is in use.

For further information on safety tips, please refer to [www.waterrower.com/safety](http://www.waterrower.com/safety).

## OPERATION

---

The WaterRower is unique in using the effect of drag to provide an exercise which is entirely self paced. Because drag is linked to speed, a crew rowing down a river chooses its intensity of exercise simply by altering the pace at which they row: the faster the boat travels the greater the drag and the harder the crew must work. There is a similar effect in swimming.

By replicating these dynamics the WaterRower does not require adjustment to increase resistance: if a more intensive workout is required, simply row faster and harder, and the WaterRower will respond accordingly.

## WATER LEVEL

---

The amount of water in the tank simulates the weight of the boat and crew as it glides down the river. Changing the water level does not change the resistance, it simply changes the mass which the user is trying to move. Increasing the water level simulates a heavier boat and crew mass, similarly reducing the water level simulates a lighter boat and crew mass.


The water level is adjusted according to one's personal preference or user type; the intensity is altered simply by moving the chosen mass faster or slower. A level gauge is positioned on the side of the the tank. Overfilling the tank could impact the warranty coverage. Do not fill above the maximum level.

**NOTE** - Fill the tank with ordinary municipal water. Municipal water contains additives which will deter the growth of algae. If municipal water is unavailable, use distilled water (do not use well water). Unless using blue dye, add the purification tablet supplied with your WaterRower. (Refer to the section on Preventative Maintenance for advice on Water Treatment).

## FOOTPAD POSITION

---

The Footpad has been designed to be adjusted for maximum comfort. The Footstrap is designed to cross the foot at the pivot point of the toes (the ball of the foot). This should enable the heel to be raised off the footboard as the user comes forward with each stroke. The Footpad can be easily adjusted to accommodate different users, simply lift the top lip of the Footpad to unhook and slide up or down to reposition on another hole.

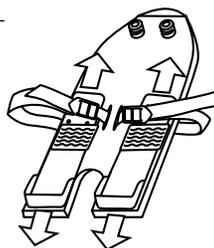

## START UP MAINTENANCE

---

During the first weeks of use, your WaterRower will adjust to use and the temperature/humidity of the environment. During this period we advise that you GENTLY tighten all the connecting bolts with the 5mm ratchet supplied. Please be careful not to overtighten any of these bolts.

Additionally, as the drive and recoil belts loosen up with use, it may be necessary to tighten the bungee cord. To do this, leave the handle in the full forward position and adjust the bungee/recoil belt buckle to provide a little more tension. It may be necessary to tighten to perform these two simple start up procedures once or twice over the first month of use. Please refer to Adjusting the Recoil video at: [www.waterrowerservice.com/videos](http://www.waterrowerservice.com/videos).

## PREVENTATIVE MAINTENANCE

---

Periodic maintenance is required to maintain the condition of the water in the tank. We strongly ADVISE USING MUNICIPAL TAP WATER which contains treatments to keep it free from bacteria and algae, etc. The water must be refreshed periodically by adding a Water Purification Tablet provided (if using the blue dye, do not use the purification tablet). The purification tablet degrades by exposure to light: this may vary from 6 months in direct sunlight to 2 years in an artificially lit environment. Generally we suggest adding one purification tablet every 6 months.

If water discoloration occurs, add a purification tablet immediately. If the water does not clear, we recommend emptying the tank, flushing it out with clean water, refilling and adding a purification tablet. **NEVER USE POOL CHLORINE OR CHLORINE BLEACH in the tank as this will irreparably damage the polycarbonate tank.** The use of an alternative purification option in the tank beyond the approved WaterRower product could void the warranty.

## MAINTAINING AND CLEANING

---

To maintain the appearance and integrity of your WaterRower it is necessary to keep the machine clean. It is particularly important to ensure that there is no dust build up in the clutch and belt mechanism between the top and bottom decks. Dust can be removed by using a cloth or vacuum cleaner.

The surface of the Rails must be kept clean to prevent dust and dirt from deteriorating the Seat Wheels; the rails can be cleaned by wiping with a damp cloth. The surface of the tank can be cleaned, however, please ensure you read the instructions for any cleaning fluids prior to use: do not use methylated chlorates or ammonia based fluids.

**DO NOT USE METHYLATED SPIRITS, CHLORATES, BLEACH OR AMMONIA BASED FLUIDS WHEN CLEANING ANY PART OF YOUR WATERROWER.** The use of improper cleaning products could void the warranty.

## MAINTAINING THE FRAME

---

The metal surface can be wiped clean with a damp cloth and a small amount of nonabrasive cleaner can be used. We do not recommend storing the WaterRower outside. The use and/or storage of the WaterRower in inclement weather, including but not limited, to extreme temperatures and moisture could void the warranty.

## STORAGE OF YOUR WATERROWER

---


Your WaterRower can be stored upright. Lift the rear leg end, pull the WaterRower towards you and use the momentum to stand it in an upright position. When storing the WaterRower, please ensure the seat is in the forward position (close to the footboard). When stored upright the WaterRower is stable and it only takes the space of a chair.

## USING YOUR WATERROWER

---


The Rowing Action uses 84% of your muscle mass; from the tips of the fingers holding the handle/oars, to the balls of the feet connected to the footboard/boat, all the muscles between these 2 points contribute to the Rowing Action.

The Rowing Action is comprised of both fast (drive phase) and slow (recovery phase) movements. It is important to combine these 2 movements into a rhythm in order to create a smooth, flowing, unhurried Rowing Action. The diagrams below show 3 basic movements of the rowing action.

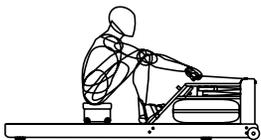


### CATCH POSITION

Sitting tall, arms straight reaching forward, shoulders relaxed, head up, eyes looking forward, legs compressed and shins vertical.

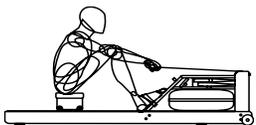

### DRIVE PHASE

Drive back with the legs, arms hang off the handle and only begin to bend once handle is above the knees, torso is strong with good posture and body angle opens up slowly as you drive the legs.

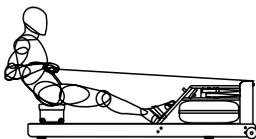

### RELEASE POSITION

Legs straight, handle drawn to chest, sitting back just past the vertical, torso firm, shoulders relaxed, head up and eyes looking forward.

Allow yourself the first few rowing sessions to practice the correct positions and phases as well as the correct ratio and rhythm of the rowing action. With regular rowing, the technique will become easier and you will soon experience the physiological benefits of rowing.

Please visit [www.HowToRow.com](http://www.HowToRow.com) to learn more about the phases and positions of the rowing technique.

## WATERCOACH

---

WaterCoach is a rowing education program designed to broaden the knowledge of rowing as a fitness pursuit. WaterCoach consists of three programs for the WaterRower owner, fitness professional/instructor and the general rowing machine user in the gym;

- WaterCoach Home - a rowing education program and personal training advice for the WaterRower owner.
- WaterCoach Professional - a rowing education program for the fitness professional/ instructor. ACE certified course.
- HowToRow - a rowing education program for the rowing machine user, at a gym.

We hope that this expanded knowledge enables you to realize the unrivalled physical benefits of rowing and get the best from your WaterRower. For more information, please visit [www.HowToRow.com](http://www.HowToRow.com).

## YOUR EXERCISE PROGRAM

---

Most of us recognize the benefit of exercise and the potential improvements to our general health and well-being. However, few of us fully understand the physiology of exercise and the best means of achieving our specific exercise objectives.

In order to get the most out of any exercise program, it is essential to have an understanding of what your exercise objectives are. These may include reducing or maintaining weight, improving general strength, developing bulging muscles, improving sporting competitiveness or simply avoiding the health consequences of a modern sedentary lifestyle. It is important to set a few different types of objectives. These are divided into:

- Immediate Objectives - weekly
- Short Term Objectives - monthly
- Long Term Objectives - yearly

Your long term objectives are your final objectives, to achieve these, you need stepping stones which are the short term objectives and immediate objectives. Objectives need to be:

- Specific - set goals that you would like to achieve by certain dates
- Realistic - do not set a standard too high or motivation will be lost
- Flexible - be prepared for set backs such as injuries and illness

## **WEIGHT MAINTENANCE**

---

At lower intensities, our body uses a mixture of fat and carbohydrate as its source of fuel. As the maximum aerobic output is approached, the percentage of fat consumed as fuel reduces to zero. Also, as the duration of exercise is increased, the percentage of fat consumed tends to increase.

If your objective is weight maintenance, then the energy (food) you consume must equal energy used (exercise, metabolism etc.). Exercising for weight maintenance is best achieved at lower intensities and over longer durations. A low intensity (60 - 70% of the maximum heart rate) is typically that at which you can hold a conversation; it is by no means strenuous and is about that achieved by a brisk walk.

## **AEROBIC TRAINING**

---

A sustained exercise program will improve the efficiency with which the respiratory and cardiovascular system can supply oxygen. This improves lung function, heart function, vascular efficiency and capillary growth, leading to improved well-being and endurance. At about 70 - 80% of the maximum heart rate, lactic acid begins to accumulate in the blood supply at a greater rate than it can be extracted by the liver, kidneys and other organs. Exercising above this intensity will cause progressive accumulation of lactic acid in the blood, increased heart and breathing rates and cause muscle fatigue.

Prolonged exercise at or below this intensity will maintain lactic acid at non-fatiguing levels and exercise duration will be limited solely to the depletion of available fuel stores. If your exercise objective is aerobic training (cardiovascular/endurance), then it is necessary to exercise at an intensity which will avoid fatigue due to lactic acid build up. This is best achieved at moderate levels of intensity over medium/long durations.

A moderate exercise intensity (70-80% of the maximum heart rate) is about that achieved by a steady jog, avoiding the onset of muscle soreness.

## **ANAEROBIC TRAINING**

---

Anaerobic training causes the build-up of lactic acid (as rapidly as one minute after exercise is commenced). Lactic acid saturation will necessitate either a rapid reduction in exercise intensity or complete cessation.

The accumulation of lactic acid limits the contribution of the anaerobic process to total energy production. Though energy may be generated rapidly, total work capacity and total output is limited.

The level of intensity at which lactic acid begins to accumulate can be altered by training. This is best done by improving the efficiency of the aerobic process and is achieved by training at moderate levels of intensity.

Exercising at anaerobic intensities may condition an athlete's tolerance to fatigue, but the benefit can be more psychological than physiological. Prolonged exercise at high intensity not only impairs the weight reduction and

aerobic training effect, but the rapid onset of fatigue can cause poor technique and increase risk of injury.

Training anaerobically is done at high intensities (80-100% of the maximum heart rate) over a short period of time (10 seconds to a few minutes). Interval training is a form of anaerobic training.

## **TRAINING GUIDELINES**

---

To ensure you get the maximum benefit from training on your WaterRower and to avoid unnecessary problems or injuries here are a few guidelines:

- **A health check before starting an exercise program.**
- **Use heart rate to monitor your intensity.**
- **Always warm up and cool down.**
- **Always stretch, especially at the end of your workout.**
- **Keep a record of your workouts.**
- **Keep well hydrated.**
- **Gradually increase the intensity, duration and frequency of your workouts.**
- **Ensure you include recovery time in your training program.**
- **Add variety to your workouts.**  
(refer to [www.HowToRow.com/workouts](http://www.HowToRow.com/workouts))

## **TRAINING RESOURCES**

---

For further information on your exercise objectives and rowing training types please visit [www.HowToRow.com](http://www.HowToRow.com).


We have done our best to keep the assembly instructions as clear and concise as possible. Assembling your WaterRower takes about 30-45 minutes and the only tool you need is a 5mm Ratchet that is included. The WaterRower comes partially assembled.

**PLEASE READ INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY**

### COMPONENTS


#### Main Parts

- A Rails x 2
- B Rear End Pad (with bungee)
- C Front End Pad
- D Seat
- E Footboard
- F Tank Assembly (with S4 monitor)
- G Tank Assembly Cover

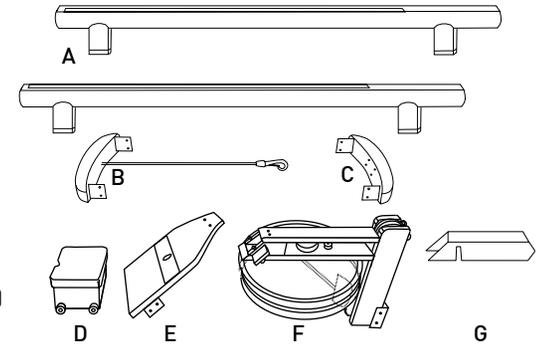

#### Other Parts

- H Button Head Cap Screw x 10  
(2 in bits bag, 8 installed on end pads)
- I Washers x 10  
(2 in bits bag, 8 installed on end pads)
- J Handle Rests x 2
- K Handle Rest Bolts x 2
- L 5mm Ratchet
- M Footpads x 2
- N Syphon Pump x 1
- O Purification Tablets\*
- P Blue Dye Bottle\*

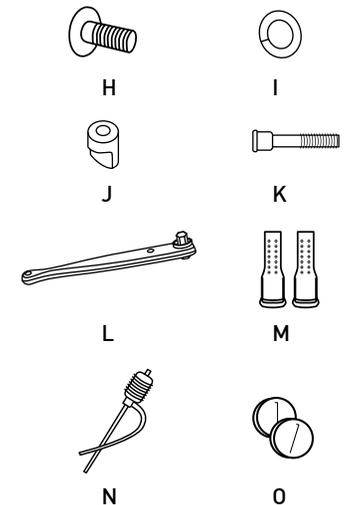

\*Only use one or the other. Using Purification tablets AND blue dye will result in the blue dye being cancelled out by the Purification tablets.




## STEP 1

Remove the M1 rails from their box(es) and lay them on the floor. Remove the M1 rear end pad assembly (with bungee connected) from the tank/component box. Carefully slide the two M1 rear end pad bracket ends into the M1 rails. The metal legs protruding from the M1 end cap fit inside the tubular section of the rails.




## STEP 2

Use the Ratchet supplied, four button head cap screws and four washers to fasten the M1 rear end pad assembly to the M1 rails as shown.

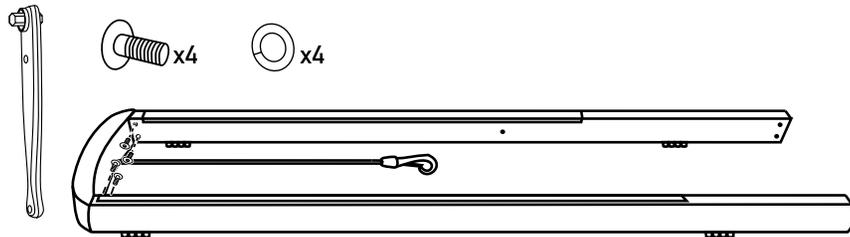


## STEP 3

Remove the seat assembly from the tank/component box and place it on/ between the rails with the indent facing towards the rear end pad. The larger vertically mounted wheels (the load wheels) should sit on the plastic extrusions on top of the rail. The smaller horizontal wheels below the seat (the guide wheels) should sit between the rails. It may be necessary to separate the rails slightly to allow the guide wheels to fit down between the rails.

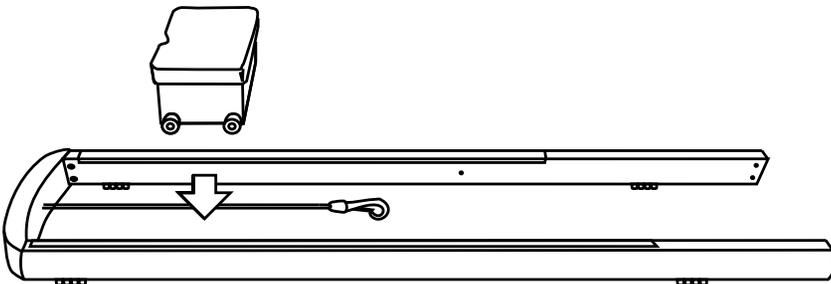


## STEP 4

Remove the M1 tank assembly from the tank/component box. Carefully slide the M1 tank assembly onto the M1 rails as shown. The metal legs protruding from the M1 end cap fit inside the tubular section of the rails, as they did with the M1 rear end pad assembly.

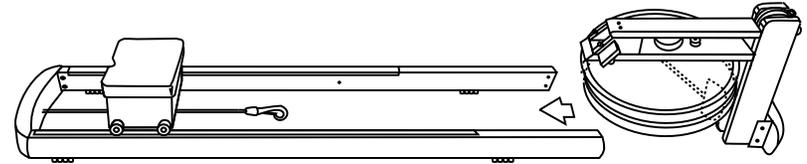

## STEP 5

Use the Ratchet supplied, four button head cap screws and four washers to fasten the M1 front end pad assembly to the M1 rails as shown, as they did with the M1 rear end pad assembly.

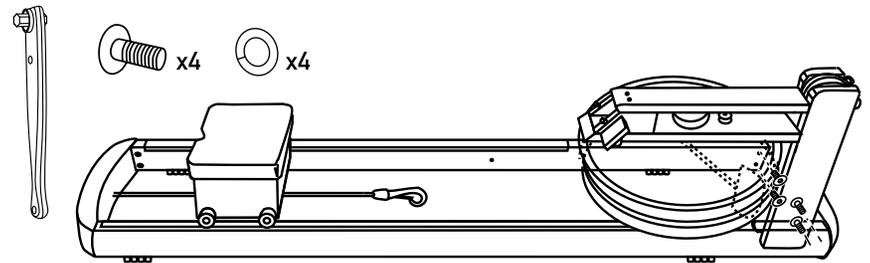

## STEP 6

Use the included syphon pump (or a hose if available) to fill the tank to the desired level with municipal water.


Do not overfill your WaterRower. Anything beyond Level 19 (the maximum level) may risk leaking and void the warranty.

Use blue dye **OR** the purification tablet (provided). Do not use both. Additional purification tablets are available upon request at:


**[www.waterrowerservice.com/puritabs](http://www.waterrowerservice.com/puritabs)**

Once completed, insert the Tank Stopper; it may be necessary to moisten the Stopper to assist with replacement.

► Please wipe excess water from tank after filling.

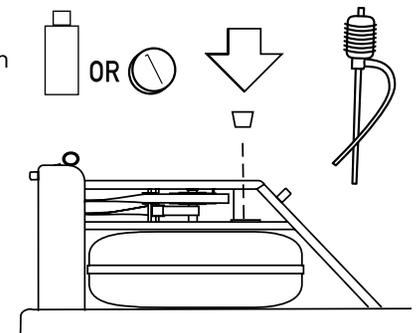


**WATER LEVEL** - The Level Gauge is positioned on the side of the tank. Information on the sticker includes WaterRower contact information and the Water Level Gauge. The maximum level to fill the tank is Level 19. **DO NOT** fill above the maximum level - this could void the warranty. The standard Calibration Level is Level 17.

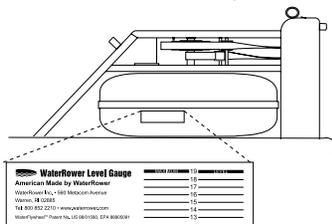


**STEP 7**

Remove the M1 tank assembly cover from the tank/component box. Starting just behind the monitor, position the cover at an angle. Slide it down and across so it covers the clutch and recoil mechanism area. Gently fit the front edge into the supporting and protective shims.

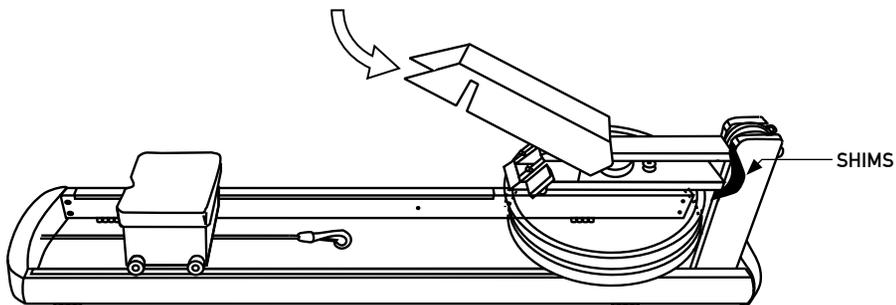


Note: The access panel on the left side of the cover allows for easier access to the tank stopper once the cover is in place.

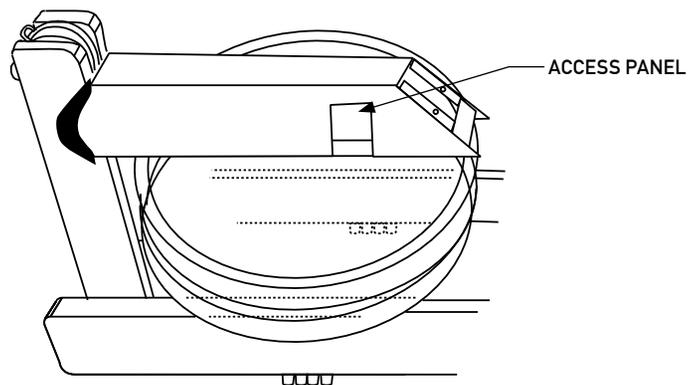


**STEP 8**

Remove the M1 footboard assembly from the tank/component box. Carefully slide the M1 footboard assembly between the M1 rails, as shown.

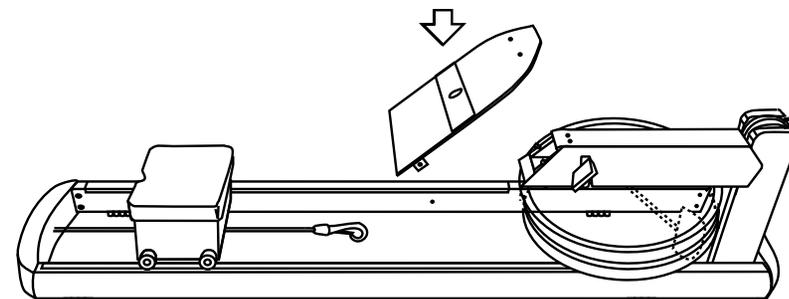


**STEP 9**

Use the Ratchet supplied, two button head cap screws, two footboard spacers (attached to footboard) and two washers to fasten the M1 footboard assembly to the M1 rails, as shown. It is important that the spacers are positioned between rails and the footboard.

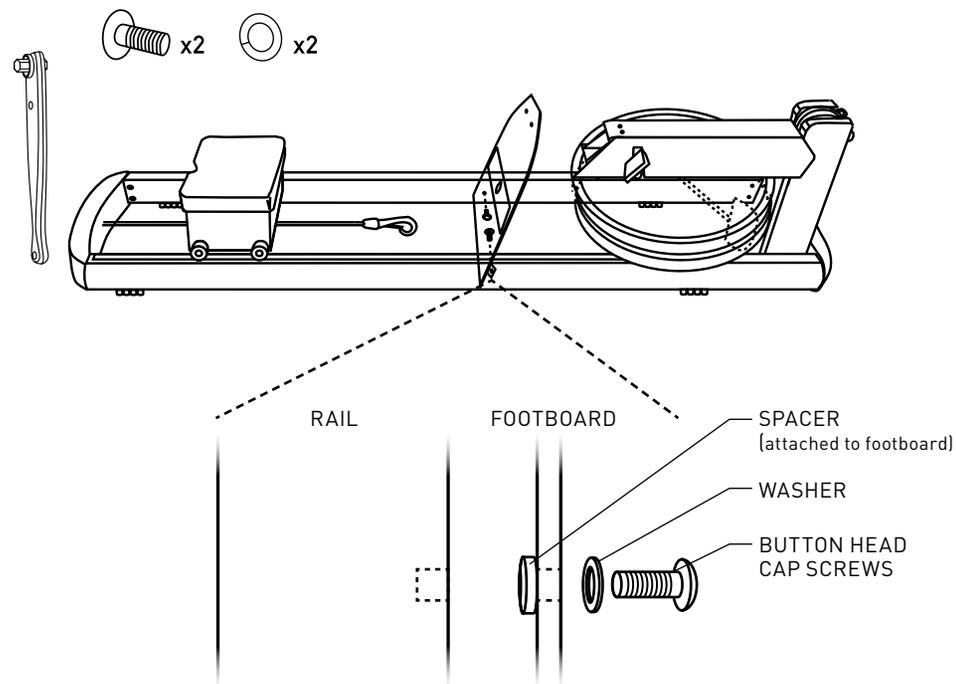


## STEP 10

Gently revolve the M1 footboard assembly toward the M1 tank assembly so that the two handle rest holes on the M1 footboard assembly pass over the two inserts on the M1 tank assembly, as shown.

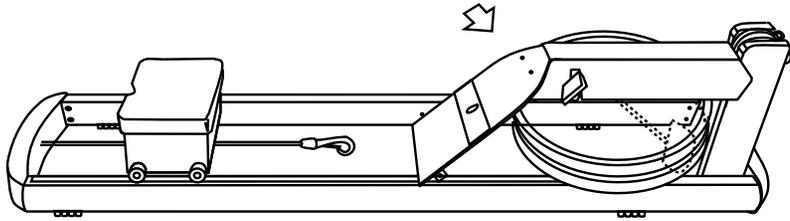


## STEP 11

Use the Ratchet supplied, two handle rest cap screws and two handle rests, fasten the top of the M1 footboard assembly to the M1 tank assembly. Do not overtighten the handle rest bolts. These can be permanently damaged if overtightened.

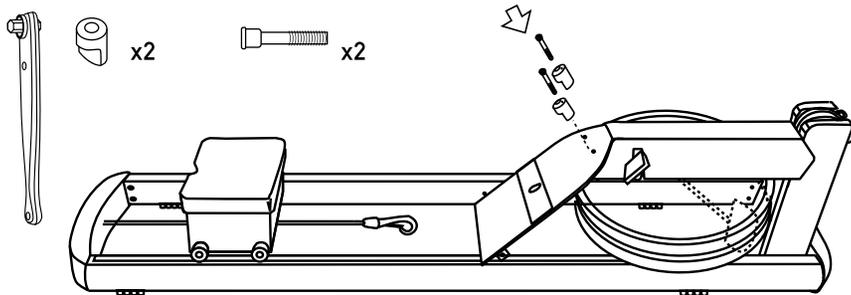


## STEP 12

Remove the two footpads from the tank/component box. Slide the footpads underneath the footpad cover plate. Use a flat head screw driver to lift the footpads up and over the lip of the cover plate. The footpads can be adjusted by lifting the top lip of the footpad up to unhook it and repositioned on another hole. Adjust as necessary.

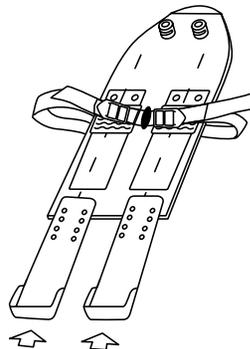

## STEP 13

Release the recoil belt which is fastened to the end pad assembly. Ensure that the recoil belt is passing over all guide pulleys. Stand the WaterRower upright to access the bungee and recoil strap. Connect the bungee to the recoil strap by hooking the bungee hook through the recoil belt D-ring.

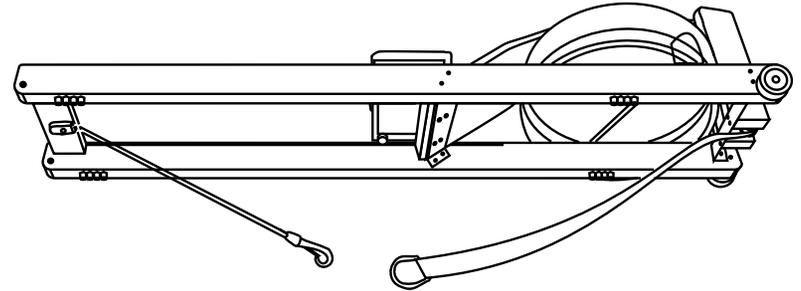

## STEP 14

Make sure your recoil belt is properly tensioned. Your recoil is too tight if the bungee is resisting you at the back of your stroke (furthest from the tank). It is too loose if there is slack during the recovery phase (coming forward toward the tank).

To Adjust:

1. Rest the handle as far forward as possible.
2. Unclip recoil belt from bungee cord.
3. Wrap (to tighten) or unwrap (to loosen) the recoil belt around the recoil bushing (where the belt winds up) by one revolution.
4. Thread recoil belt back along its path.
5. Clip recoil belt to bungee.
6. For fine adjustments, use recoil belt buckle.


► Video can be found at [www.waterrowerservice.com/videos](http://www.waterrowerservice.com/videos)

Congratulations, your WaterRower is now ready for use!

## HOW TO FILL AND EMPTY THE TANK

---


- 1) To pump water, turn the knob clockwise to close valve as shown in figure A
- 2) Locate water source above (higher than) water destination:
  - See Figure B for filling tank
  - See Figure C for emptying tank
- 3) Squeeze pump 4-5 times until water flows
- 4) Turn knob counter-clockwise to allow air into the pump and end syphon.

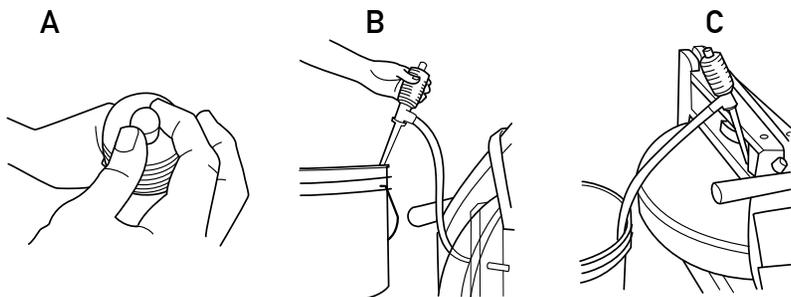


## TROUBLESHOOTING

---

1. **Monitor flashing zeros**  
**Solution 1:** Try raising the sensor disk (located on top of the clutch). During shipment, the disk may have shifted.

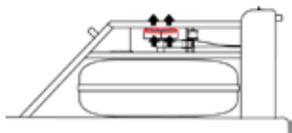


**Solution 2:** Loosen and retighten the bolts on the upper deck and forward riser. If these bolts are not uniformly tightened during assembly, the alignment may be off.

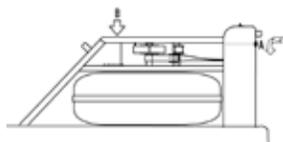

2. **Loosening bolts** - over time and with use bolts can come loose. Use the 5mm Allen key to gently tighten the bolts. If the bolts continue to loosen use a small amount of medium strength Loctite® to fasten the nuts and bolts more securely.
3. **Monitor not turning on** - check the batteries positioned behind the monitor. Unscrew the monitor and gently lift to access the battery pack.
4. **Monitor not counting down** - check the monitor and sensor connector is connected. Check all wiring is intact.
5. **Paddle not turning smoothly** - Loosen all tank bolts and retighten. See instructions at: [http://www.waterrowerservice.com/pdfs/troubleshooting\\_all\\_rubbing\\_tank.pdf](http://www.waterrowerservice.com/pdfs/troubleshooting_all_rubbing_tank.pdf)

For other troubleshooting and service tips: [www.waterrowerservice.com](http://www.waterrowerservice.com)

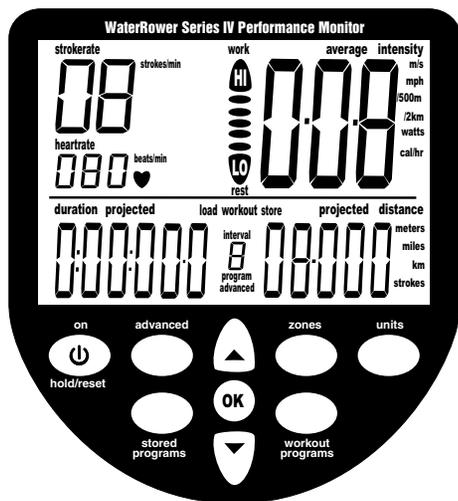

The WaterRower S4 Performance Monitor has been designed to balance a high level of technical sophistication with user friendliness.

The WaterRower S4 Monitor consists of the following information buttons and windows (see the following pages for specific details about each button and window):

### BUTTONS

#### On/Hold/Reset Button

Press the ON button to start up the monitor: the units will flash ready to count down as you begin rowing. To reset the monitor, press the ON button for 2 seconds.

#### Programming Buttons

Zones, Workout Programs, Advanced, Stored Programs

#### Navigation/Select/Display Information Buttons

Up, Down, OK, Units

### WINDOWS

#### Information/Programming Windows

*Strokerate, Heart Rate, Duration, Intensity, Average Intensity, Distance*

These Information and Programming Windows show your current and programmed workout details.

#### Zone Bar Window

Seen in the top middle part of the screen, the Zone Hi / Zone Lo bars are used during zone, interval and advanced workouts. They will flash and emit a high frequency tone when your Hi or Lo limit is breached.


#### Stored Workout, Interval Number, Advanced Program Number

Seen in the bottom middle part of the screen, this window displays numbers to navigate through numbered or sequenced information (stored workouts, intervals and advanced programs).

### INFORMATION AND PROGRAMMING WINDOWS

The WaterRower S4 Monitor has 6 main information windows that will display when the monitor is in use:

- A. Strokerate
- B. Heart Rate
- C. Duration
- D. Intensity
- E. Average Intensity
- F. Distance

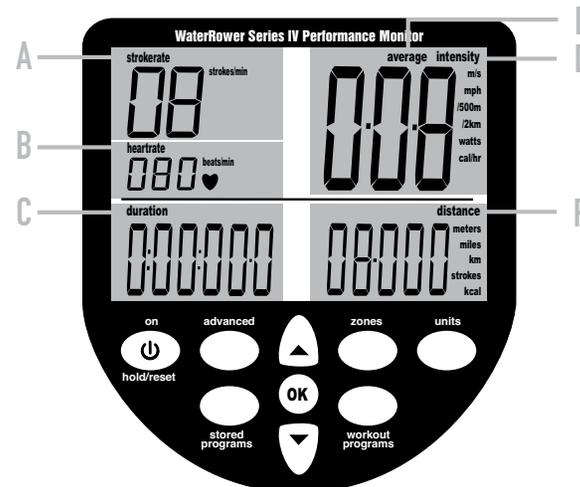


See the chart below for the full description on each information window, as well as how to select desired units.

### PRIMARY INFORMATION DISPLAYED ON THE S4 MONITOR

<b>A - STROKERATE</b>	
Displays the number of strokes rowed per minute.	
<b>B - HEART RATE</b>	
Displays current heart rate (requires optional heart rate receiver and transmitter).	
<b>C - DURATION</b>	
Displays time in: <b>HOURS, MINUTES, SECONDS, DECIMAL SECONDS</b>	
<b>D - INTENSITY</b>	
Displays <b>SPEED/POWER/ENERGY</b> :	To select desired intensity unit:
<ul style="list-style-type: none"> <li>• <b>M/S</b> - METERS PER SECOND</li> <li>• <b>MPH</b> - MILES PER HOUR</li> <li>• <b>/500M</b> - MINUTES PER 500 METERS</li> <li>• <b>/2KM</b> - MINUTES PER 2 KILOMETERS</li> <li>• <b>WATTS</b> - WATTS</li> <li>• <b>CAL/HR</b> - CALORIES BURNT PER HOUR</li> </ul>	<ol style="list-style-type: none"> <li>1. Press <b>UNITS one (1) time</b>.</li> <li>2. Use <b>ARROW</b> buttons to scroll to the desired intensity unit.</li> <li>3. Press <b>OK</b> to select.</li> </ol>
<b>E - AVERAGE INTENSITY</b>	
Displays <b>AVERAGE SPEED</b> :	To select desired average intensity unit:
<ul style="list-style-type: none"> <li>• <b>M/S</b> - METERS PER SECOND</li> <li>• <b>MPH</b> - MILES PER HOUR</li> <li>• <b>/500M</b> - MINUTES PER 500 METERS</li> <li>• <b>/2KM</b> - MINUTES PER 2 KILOMETERS</li> </ul>	<ol style="list-style-type: none"> <li>1. Press <b>UNITS two (2) times</b>.</li> <li>2. Use <b>ARROW</b> buttons to scroll to the desired intensity unit.</li> <li>3. Press <b>OK</b> to select.</li> </ol>
<b>F - DISTANCE</b>	
Displays <b>DISTANCE</b> in:	To select desired distance unit:
<ul style="list-style-type: none"> <li>• <b>METERS</b></li> <li>• <b>MILES</b></li> <li>• <b>KILOMETERS (KM)</b></li> <li>• <b>STROKES</b></li> <li>• <b>CALORIES (KCAL)</b></li> </ul>	<ol style="list-style-type: none"> <li>1. Press <b>UNITS three (3) times</b>.</li> <li>2. Use <b>ARROW</b> buttons to scroll to the desired distance unit.</li> <li>3. Press <b>OK</b> to select.</li> </ol>


## WORKOUT PROGRAMS BUTTON

### DISTANCE WORKOUT

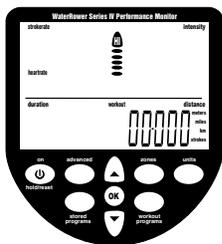


1. Press the **Workout Programs** button *one (1) time*.
2. Using the **Arrows**, scroll to the desired workout *distance*.
3. Press **OK**; Row.

### DURATION WORKOUT

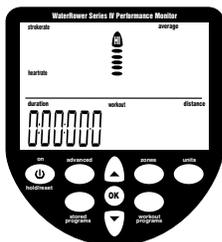

1. Press the **Workout Programs** button *two (2) times*.
2. Using the **Arrows**, scroll to the desired workout *duration*.
3. Press **OK**; Row.

### INTERVAL WORKOUT - DISTANCE

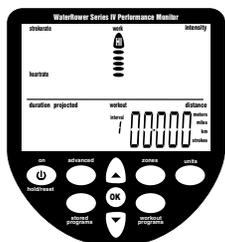


Interval 1 Workout Distance




Interval 1 Recovery Duration\*

1. Press the **Workout Programs** button *three (3) times*.
2. Using the **Arrows**, scroll to the desired *interval one (1) distance*.
3. Press **OK**.
4. Using the **Arrows**, scroll to the desired *interval one (1) recovery duration\**.
5. Press **OK**.
6. Repeat steps 2-5 (up to 9 distance intervals may be entered).
7. Press **OK** two (2) times to end sequence; Row.

### INTERVAL WORKOUT - DURATION

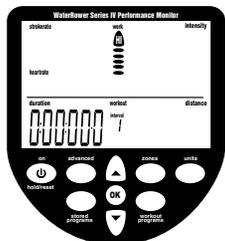

Interval 1 Workout Duration

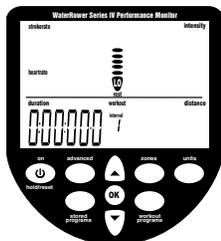

Interval 1 Recovery Duration\*

1. Press the **Workout Programs** button *four (4) times*.
2. Using the **Arrows**, scroll to the desired *interval one (1) workout duration*.
3. Press **OK**.
4. Using the **Arrows**, scroll to the desired *interval one (1) recovery duration\**.
5. Press **OK**.
6. Repeat steps 2-5 (up to 9 duration intervals may be entered).
7. Press **OK** two (2) times to end sequence; Row.


\*RECOVERY DURATION OF LESS THAN 2 MINUTES MUST BE SET OR MONITOR WILL POWER OFF

## ZONES BUTTON

Zone setting allows the user to set upper (hi) and lower (lo) limits for *heart rate, intensity and strokerate*.


- When the set **zone lo** limit is breached the zone bar lo flag will flash and a low frequency tone will emit.
- When the set **zone hi** limit is breached the zone bar hi flag will flash and a high frequency tone will emit.
- When operating between the upper and lower zone limits, the position in this range will be displayed by the divisional zone bars.

### HEART RATE ZONE SETTING

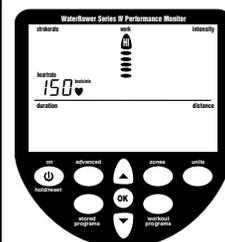


1. Press the **Zones** button *one (1) time*.
2. Using the **Arrows**, scroll to the desired *upper limit*.
3. Press **OK**.
4. Using the **Arrows**, scroll to the desired *lower limit*.
5. Press **OK**; Row.

### INTENSITY ZONE SETTING

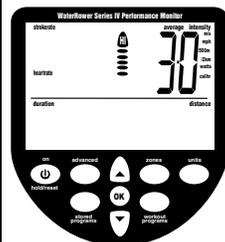


1. Press the **Zones** button *two (2) times*.
2. Using the **Arrows**, scroll to the desired *upper limit*.
3. Press **OK**.
4. Using the **Arrows**, scroll to the desired *lower limit*.
5. Press **OK**; Row.

### STROKERATE ZONE SETTING

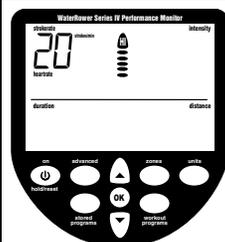

1. Press the **Zones** button *three (3) times*.
2. Using the **Arrows**, scroll to the desired *upper limit*.
3. Press **OK**.
4. Using the **Arrows**, scroll to the desired *lower limit*.
5. Press **OK**; Row.

**ADVANCED PROGRAM 1: STORE WORKOUT SETTINGS**

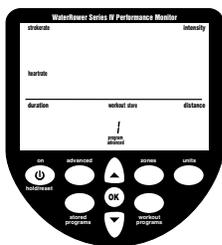

This program allows manual storage of workout settings. This is useful if the S4 monitor is used by numerous users and the AutoStore programs are overwritten.

1. Press the **Advanced** button *one (1) time*.
2. Press **OK**.
3. Using the **Arrows**, scroll to desired workout storage location (1-9).
4. Press **OK**.

**ADVANCED PROGRAM 2: RETRIEVE WORKOUT SETTINGS**



1. Press the **Advanced** button *two (2) times*.
2. Press **OK**.
3. Using the **Arrows**, scroll to desired workout storage location (1-9).
4. Press **OK**.
5. The workout settings stored in the selected location will be loaded.

*\*Retrieving workouts can also be loaded by pressing the **stored programs** button (see **Autostore Programs** section).*

**ADVANCED PROGRAM 3: PROJECTED DURATION**




**Projected duration** is the duration projected for the set distance given the current intensity. Projected duration must be selected immediately prior to the workout and is current only for that workout.

1. Press the **Advanced** button *three (3) times*.
2. Press **OK**; Row.

*Projected duration* is now selected and will be displayed in lieu of *duration* for 2 seconds out of every 10 seconds.

**ADVANCED PROGRAM 4: PROJECTED DISTANCE**

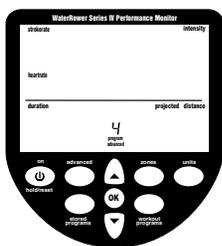


**Projected distance** is the distance projected for the set duration given the current intensity. Projected distance must be selected immediately prior to the workout and is current only for that workout.

1. Press the **Advanced** button *four (4) times*.
2. Press **OK**; Row.

*Projected distance* is now selected and will be displayed in lieu of *distance* for 2 seconds out of every 10 seconds.

**ADVANCED PROGRAM 5: RATIO**

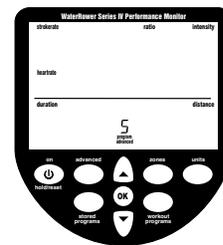

Advanced Program 5 allows you to view the ratio between the power and recovery parts of the stroke. The recovery ratio must be selected immediately prior to the workout and is current only for that workout.

1. Press the **Advanced** button *five (5) times*.
2. Press **OK**; Row.

*Power:Recovery Ratio* is now selected and will be displayed in lieu of *duration* for 2 seconds out of every 10 seconds.


**ADVANCED PROGRAM 6: ADVANCED HEART RATE ANALYSIS**

Advanced Program 6 is available only during Heart rate Zone Workouts and must be viewed following the workout.


1. Press the **Advanced** button *six (6) times*.
2. Press **OK**.
3. Heart rate statistics will display the following information:




**Maximum (peak) heart rate:**  
The maximum heart rate achieved shows in the heart rate window.

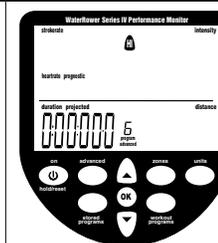

**Total time spent above the desired heart rate zone:**  
The time spent above the heart rate zone hi setting shows in the time window.

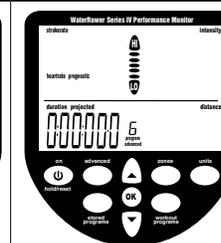


**Total time spent within the desired heart rate zone:**  
The time spent between the heart rate zone hi and lo shows in the time window.

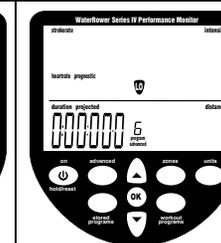

**Total time spent below the desired heart rate zone:**  
The time spent below the heart rate lo setting shows in the time window.

**ADVANCED PROGRAM 7: PROGNOSTICS**

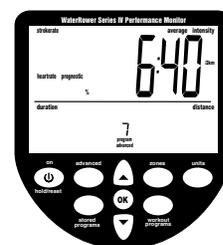

Advanced Program 7 allows you to view your prognostics (the % of a defined 2km time). **This option is available only during 2km workouts.**

1. Press the **Advanced** button *seven (7) times*.
2. Press **OK**.
3. Enter your expected 2km time using the **Arrows**.
4. When desired 2km duration is reached, press **OK**.

## ADVANCED BUTTON (CONTINUED)


### ADVANCED PROGRAM 8: TANK VOLUME



This program allows you to input the volume of water in the tank. The tank volume is necessary in calculation of power (watts).

1. Press the **Advanced** button *eight (8) times*.
2. Press **OK**.
3. Using the **Arrows**, enter the tank volume (seen in the intensity window).
4. When desired volume is reached, press **OK**.

### ADVANCED PROGRAM 9: FIRMWARE VERSION / TOTAL MACHINE DISTANCE

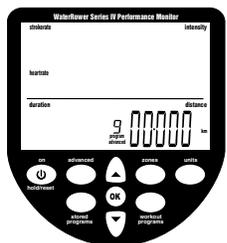


This program allows you to view the Firmware Version (the version of the software that runs the monitor) and the total distance the machine has traveled.

1. Press the **Advanced** button *nine (9) times*.
2. The total lifetime distance (in km) will be displayed.
3. Press **OK**.
4. The total lifetime distance (in km) and Firmware version will be displayed.

## STORED PROGRAMS BUTTON


### AUTOSTORE PROGRAMS

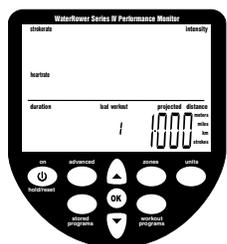

The WaterRower S4 monitor includes an AutoStore function which automatically stores the last 9 historic workout program settings.

Note: Changing the batteries will erase stored programs.

### RETRIEVING AUTOSTORE PROGRAMS

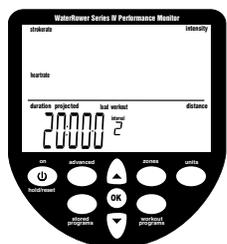

1. Press the **Stored Programs** button.
2. The historic sequence of workouts (1-9) will appear in the program window.
3. The monitor will automatically scroll through the workout settings.
4. When desired workout is highlighted, press **OK**; Row.

## WARRANTY

**PRIVATE AND COMMERCIAL USE** - WaterRower will replace or repair at its factory or nominated service facility any WaterRower or WaterRower component found to be defective in material or workmanship for a period of **ONE (1) YEAR** from the date of initial shipment by WaterRower. The warranty is upgradeable to **THREE (3) YEARS** on all components and **FIVE (5) YEARS** on all wooden elements by registering your WaterRower within the first year of purchase.

This warranty will be invalid if, in the opinion of WaterRower, the claim has been caused by: (a) accident, abuse, misuse, misapplication or as a result of any modification other than by WaterRower, (b) deterioration due to normal wear and tear, (c) improper preventative maintenance steps as described in the WaterRower Owner's Manual.

The warranty will be voided if, in the opinion of WaterRower, the claim is found to be a result of: (a) improper assembly of the product, (b) usage beyond the design of the product, (c) overfilling of the tank as advised in the Assembly Manuals, (d) use of alternative purification option in tank beyond approved WaterRower product, (e) use of improper cleaning materials as described in the preventative maintenance steps, (f) use and/or storage of product in inclement weather, including but not limited, to extreme temperatures and moisture.

This warranty is not transferable. WaterRower (US) Inc. shall not be liable for any direct, consequential, incidental indirect or special damages under this warranty, or any implied warranty.

Return of the WaterRower or WaterRower component to WaterRower's factory or nominated service centre will be the responsibility of the claimant. The WaterRower or component should be packed to protect it from damage; WaterRower will not be responsible for any damage which may occur during shipment. Postage should be prepaid and the package should contain the claimant's name, address and telephone number, a description of the problem and proof of purchase.

WaterRower will return the WaterRower or WaterRower component to the claimant at its (WaterRower's) expense except in the case where the warranty has been deemed void or invalid. In the event that the warranty is found to have been void or invalid, then the costs of such investigation, repair and any associated shipping costs shall be borne by the claimant.

WaterRower will ground/economy ship all replacement warranty parts. Charges will apply for all alternative shipping methods. Product shipped outside of its initial purchase country may be subject to additional warranty cost and shipping charges.

WaterRower warrants against any defective WaterRower spare part received from WaterRower or any authorized dealer for a period of **NINETY (90) DAYS** after the date of shipment.

The warranty described above shall be in lieu of any other warranty, express or implied, including but not limited to, any implied warranty of merchantability or fitness for a particular purpose. The term of this warranty does not affect or prejudice the statutory rights of a consumer, neither does it limit or exclude any liability for death or personal injury caused by WaterRower's negligence.

Additional information on parts, assembly, preventative maintenance and manuals, as referred to within this warranty document, can be found at [www.waterrower.com/warranty](http://www.waterrower.com/warranty).

Please consult your local WaterRower office or local distributor for specific warranty details.



---

**UNITED STATES** | [www.waterrower.com](http://www.waterrower.com)

560 Metacom Avenue | Warren, RI 02885

Tel: +1 (401) 247 7742 | [info@waterrower.com](mailto:info@waterrower.com)

**UNITED KINGDOM** | [www.waterrower.co.uk](http://www.waterrower.co.uk)

19 Acton Park Estate | The Vale, London W3 7QE

Tel: +44 (0)20 8749 9090 | [info@waterrower.co.uk](mailto:info@waterrower.co.uk)

**AUSTRALIA** | [www.waterrower.com.au](http://www.waterrower.com.au)

72 South Street | Rydalmere NSW 2116 Australia

Tel: +61 (0) 2 9681 4221 | [info@waterrower.com.au](mailto:info@waterrower.com.au)